

PLUTO

Kamera-Auslösekabel

Wir haben 13 Verbindungskabel im Angebot, damit decken wir über 300 Kameramodelle ab. Folgende Kabel sind verfügbar: E3, N3, DC0, DC1, DC2, S1, S2, UC1, CB1, P1, L1, F und SA. Neben der Möglichkeit Kameras via Kabel aus zu lösen, verfügt der Pluto Trigger auch die Möglichkeit Kameras über Infrarot auszulösen.

PLUTO

Camera Trigger Cables

There are 13 types of cables to support more than 300 types of cameras: E3, N3, DC0, DC1, DC2, S1, S2, UC1, CB1, P1, L1, F and SA cables. Besides triggering cameras via shutter cables, Pluto Trigger is also able to trigger most IR remote-compatible cameras. Below is the list of cameras supported by each cable and IR remote.

Canon

- **E3:** 1000D, 1100D, 1200D, 1300D, 1500D, 2000D, 100D, 200D, 250D, 300D, 350D, 400D, 450D, 500D, 550D, 600D, 60D, 60Da, 650D, 700D, 750D, 760D, 850D, 70D, 77D, 80D, 90D, 8000D, Kiss Digital, Kiss Digital F, Kiss Digital N, Kiss Digital X, Kiss X2, Kiss X3, Kiss X4, Kiss X5, Kiss X50, Kiss X70, Kiss X6i, Kiss X7i, Kiss X8i, G1X, G1X II, G1X III, G3X, G5X, G10, G11, G12, G15, G16, SX50 HS, SX60 HS, SX70 HS, Digital Rebel, Rebel SL1, Rebel SL2, Rebel SL3, Rebel T1i, Rebel T2i, Rebel T3, Rebel T3i, Rebel T4i, Rebel T5, Rebel T5i, Rebel T6, Rebel T6i, Rebel T6s, Rebel T7, Rebel T7i, Rebel T8i, Rebel XS, Rebel XSi, Rebel XT, Rebel XTi, EOS M5, EOS M6, EOS M6 MK II, EOS R, EOS RP, EOS R6, EOS R7, EOS R10
- **N3:** 1D, 1D C, 1D MK II, 1D MK II N, 1D MK III, 1D MK IV, 1D X, 1D X MK II, 1D X MK III, 1Ds, 1Ds ASTRO, 1Ds MK II, 1Ds MK III, 1V, 10D, 20D, 20Da, 30D, 40D, 50D, 5D, 5D MK II, 5D MK III, 5D MK IV, 5Ds, 5Ds R, 6D, 6D MK II, 7D, 7D MK II, D30, D60, EOS 3, D2000, EOS R3, EOS R5
- **Not supported:** EOS M, EOS M3, EOS M50, G7, G9, Powershot N, S90, S95, S100, S110, S120, SX510 HS, XC10, 4000D
- **IR remote:** 5DMK III, 5D MK II, 6D, 7D, 70D, 60D, 60Da, 700D, 650D, 600D, 550D, 500D, 450D, 400D, 350D, 300D, 100D, EOS M, EOS 30, 33, 30V, EOS 50, 50E, 55, EOS 100, EOS 10, EOS 300V, 300VQD, 3000V, EOS IX, G7, G6, G5, G3, G2, G1, S70, S60, Pro 1, Pro90IS, Prima Super 180, Prima Super 155, Prima Super 120, IXUS Z70, IXUS II, IXUS L-1, IXUS

Nikon

- **DC0:** Z9, D1, D100(w/MB-D100 grip), D1H, D1X, D2, D200, D2H, D2HS, D2X, D2XH, D2XS, D3, D300, D300S, D3s, D3X, D4, D4S, D5, D6, D500, D700, D800, D800 E, D810, D810 A, D850, F5, F6, F90, F100
- **DC1:** D70S, D80
- **DC2:** Z5, Z6, Z6 II, Z7, Z7 II, D750, D780, D3100, D3200, D3300, D5000, D5100, D5200, D5300, D5350, D5500, D5600, D600, D610, D7000, D7100, D7200, D7500, D90, Df, Coolpix P7700, Coolpix P7800, Coolpix A, Coolpix P950, Coolpix P1000
- **Not supported:** 1 AW1, 1 J1, 1 J2, 1J3, 1 S1, 1 V1, D40, D40X, D50, D60, D70, D100, D3000, D3400, D3500, L840, P610, P900, Z50, Z fc
- **IR remote:** D600, D610, D7000, D7100, D90, D80, D3000, D3200, D3400, D5000, D5100, D5200, D60, D50, D40X, D40, D70, D70S, P7000, P7100, P7700, V1, V2, J1, J2, Coolpix A, U2, U, F75, CP8400, CP8800, 100WQD, 150ED, 140ED, 130ED, 110S, 70Ws, F65, F75, Coolpix P900

Sony

- **S1:** A100, A200, A300, A33, A35, A350, A37, A400, A450, A500, A55, A550, A550V, A560, A57, A580, A65, A65V, A700, A77, A77 II, A77V, A850, A900, A99, A99 II
- **S2:** A3000, A3500, A5000, A5000L, A5100, A6000, A6300, A6400, A6500, A6600, A1, A7, A7 II, A7 III, A7 IV, A7S, A7S II, A7S III, A7R, A7R II, A7R III, A7R IV, A9, A9 II, HX300, HX400, HX50V, HX60, HX80, HX90, HX90V, NEX 3N, A58, A68, RX10, RX10 II, RX10 III, RX10 IV, RX100 II, RX100 III, RX100 IV, RX100 V, RX100 VI, RX100 VII, RX100 Platinum, NEX-3NL
- **Not supported:** A7C, A230, A290, A330, A330TT, A380, A390, A3000, NEX-3, NEX-3C, NEX-5, NEX-5T, NEX-5R, NEX-5N, NEX-5C, NEX-6, NEX-7, NEX-C3, NEX-F3, QX 10, QX 100, RX1, RX1R
- **IR remote:** A900, A700, A580, A560, A550, A500, A450, A390, A290, A330, A230, A55, A33, SLT-A99, SLT-A77, SLT-A65, SLT-A57, A7R, A7, ILCE 3000, NEX-7, NEX-6, NEX-5T, NEX-5R, NEX-5N, NEX-5C, NEX VG20, NEX V30, NEXVG900, CX550E, CX560E, HDR-XR550E, HXR-MC58C, HDR-6R11

Olympus

- **UC1:** E-100 RS, E-30, E-400, E-410, E-420, E-450, E-510, E-520, E-600, E-620, Evolt E-410, Evolt E-510, OM-D E-M1, OM-D E-M5, OM-D E-M5 II, OM-D E-M10, OM-D E-M10 MK II, PEN E-P1, PEN E-P2, PEN E-P2 SE, PEN E-P3, PEN E-P5, PEN E-PL2, PEN E-PL3, PEN E-PL5, PEN E-PL6, PEN E-PL7, PEN E-PM1, PEN E-PM2, SP-510UZ, SP-550, SP-560, SP-570, SP-590UZ, SP-810UZ, SZ-300MR, SZ-20, SZ-11, XZ-1, XZ-2, XZ-2iHS, Stylus 1, Stylus 1s, Stylus SH-2, PEN-F
- **CB1:** E-1, E-3, E-10, E-20, E-5
- **E3:** OM-1, OM-D E-M1 MK II, OM-D E-M1 MK III, OM-D E-M1X, OM-D E-M5 MK III
- **Not supported:** E-330, E500, Evolt E-330, Evolt E500, PEN E-PL1, PEN E-PL1s, SP-510 UZ, OM-D E-M10 III
- **IR remote:** E1, E300, E330, E400, E410, E420, E450, E500, E510, E520, E10, E20, E100RS, E2100, E2500, Stylus 800, Stylus 500, Stylus 410, Stylus 400, Stylus 300, D40 Zoom, C8080 Wide Zoom, C770 Ultra Zoom, C755 Ultra Zoom, C750 Ultra Zoom, C730 Ultra Zoom, C7070 Wide Zoom, C7000 Ultra Zoom, C60 Zoom, C5060 Wide Zoom, C5050 Zoom, C5000 Zoom, C50 Zoom, C4040 Zoom, C3040 Wide Zoom, C3030 Zoom, C3000 Zoom, C2500L, C2100 Ultra Zoom, C2040 Zoom, C2020 Zoom, C2000 Zoom

Panasonic

- **L1:** Ft2, FZ100, FZ1000, FZ1000 II, FZ2000, FZ2500, FZ15, FZ150, FZ20, FZ20K, FZ20S, FZ200, FZ30, FZ30K, FZ30S, FZ300, FZ50, FZ50K, FZ50S, G1, G2, G3, G5, G6, G7, G9, G10, G70, G80, G85, GF1, GH1, GH2, GH3, GH4, GH5, GX1, GX7, GX8, L1, L10, LC1, S1, S1H, S1R, TS2, DIGILUX 2, DIGILUX 3
- **Not supported:** FZ35, FZ45, FZ70, FZ72, FZ80, FZ82, GF2, GF3, GF5, GM1, LX5, LX7, GX9, GX80, GX85

Pentax

- **E3:** 645D, 645Z, ist D, ist DL, ist DL2, ist DS, ist DS2, K1, K1 II, K-3, K3 II, K-30, K-5, K-5 II, K-5 IIs, K-5 IIt, K-50, K-500, K-7, K10 Grand Prix, K100D, K100D Super, K10D, K110D, K200D, K20D, MZ-6, MZ-L, ZX-L
- **P1:** K-70, KP
- **Not supported:** K-m, K-r, K-S2, K-x, MX-1, Q, Q-S1, K3 III
- **IR remote:** 645D, X5, MX1, K10D, K20D, K-30, K-50, K-100, K-100D, K-110D, K200D, K-7, K-5 II, K-5, K-3, K-01, K-x, K-m, K-r, 645Z, K100D Super, K-61, K-5 IIs, Q, Q7, Q10, Q61, ist DS2, ist DS, ist DL2, ist DL, ist D, MZ-6, A30, A40, I-10, RZ18, S1, S10, T30, VS20, W90, WG2, WG3, WG10, S60, S6, S5Z, S5N, S5i, S4i, SV, SVi, 550, 555, 750Z, 330, 430, 430RS, 24EW, 170SL, 140V, 120SWII, 105WR

FujiFilm

- **F**: X-M1, X-E2S, X-A1, X-A2, X-A3, XQ1, XQ2, Finepix S1, X30
- **DC0**: S3 Pro, S5 Pro, IS Pro
- **E3**: X-E1, X-E2, X-E3, X-H1, X-Pro2, X-Pro3, X-T1, X-T2, X-T3, X-T4, X-T10, X-T20, X-T30, X-T100, X100T, X100F, X100V, X70, GFX50R, GFX50S, GFX100, GFX100S
- **P1**: X-T200
- **K**: FinePix S100FS, S9000, S9100, S9500, S9600, IS-1, S20, S200EXR, S205EXR, HS20EXR, HS22EXR, HS25EXR, HS28EXR, HS33EXR, HS30EXR, HS35EXR, HS50EXR, X-E1, X-S1
- **Not supported**: HS10, HS11, S1 Pro, S2 Pro, X-Pro1, X100, X100S, XF-1, X-S10

Minolta

- **S1**: DiMAGE 5, DiMAGE 7, DiMAGE 7Hi, DiMAGE 7i, DiMAGE A1, DiMAGE A2, DiMAGE A200, Dynax 3, Dynax 4, Dynax 5000, Dynax 500si, Dynax 505si, Dynax 5D, Dynax7, Dynax 7000, Dynax 7D, Dynax 9, Dynax 9000, Dynax Sweets, Maxxum 3, Maxxum 4, Maxxum 5000, Maxxum 500si, Maxxum 505si, Maxxum 5D, Maxxum 600si, Maxxum 7, Maxxum 7000, Maxxum 700si, Maxxum 7D, Maxxum 807si, Maxxum 9, Maxxum 9000
- **IR remote**: α -5, 3, 70, 50, 100, DiMAGE A200, F300, Capios Family, S304

Samsung

- **E3**: GX-1L, GX-1S, GX-20, NX-100, NX-11, NX-10, NX-5
- **SA**: EX2F, Galaxy NX, NX Mini, NX-1, NX1000, NX1100, NX20, NX2000, NX210, NX30, NX300, NX300M, NX500
- **Not supported**: NX-200, NX-210, NX3000

Sigma

- **E3**: SD1, SD1 Merrill, SD15
- **Not supported**: DP1, DP2, SD14

Hasselblad

- **E3**: H, H3D, H4D-200MS, H4D-31, H4D-40, H4D-50, H4D-50MS, H4D-60, H5D, H6D
- **S1**: HV
- **P1**: X1D

Contax

- **E3**: 645, N, N1, NX, N Digital

Leica

- **L1**: V-Lux (Typ 114), V-Lux 2, V-Lux 3, V-Lux 4, DigiLux 2, DigiLux 3
- **Not supported**: C(Typ 112), M-Monochrom, M8, M8.2, M9, M9-P, S2, X1

Lytro

- **E3**: Illum
- **Not supported**: Lytro Camera

Kodak

- **DC0**: DCS Pro 14n
- **N3**: DCS-560

Stand: November 2022